




**MANUAL DE INSTRUCCIONES
LAVADORA AUTOMÁTICA
LAV-5330A**

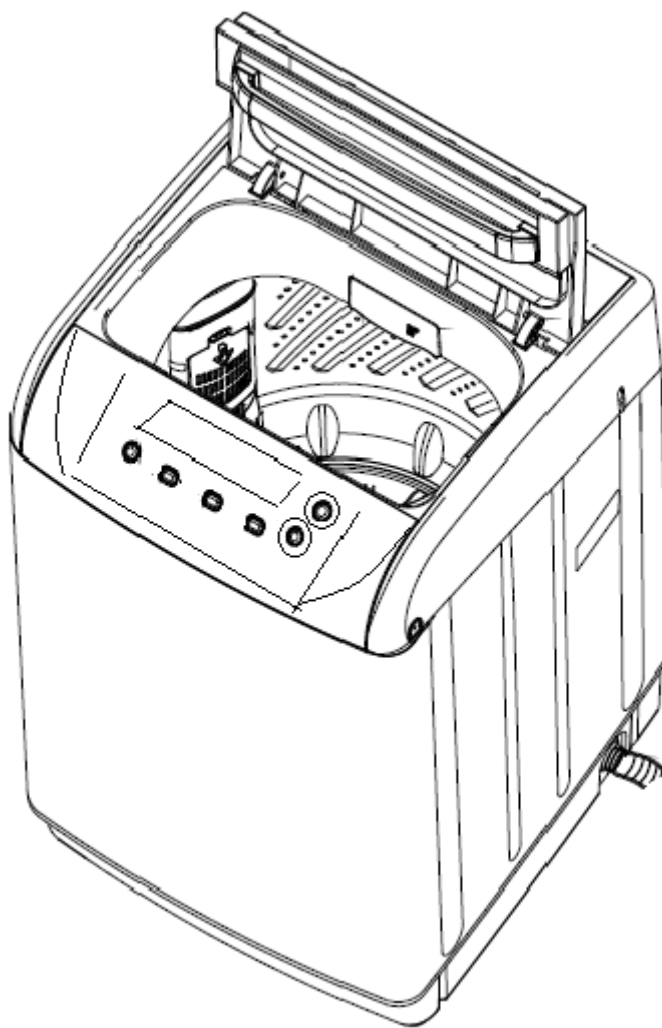

ESTIMADO CLIENTE




Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.

Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

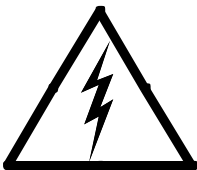DESCRIPCIÓN	2
ESPECIFICACIONES	2
INSTRUCCIONES DE SEGURIDAD	3
INSTALACIÓN	3
PREPARACIÓN ANTES DE LAVAR	6
DESCRIPCIÓN DEL PANEL DE FUNCIONES	7
PANEL DE CONTROL	8
INSTRUCCIONES DE OPERACIÓN	10
LIMPIEZA Y MANTENIMIENTO	10
RESOLUCIÓN DE PROBLEMAS	11
CONTENIDO.....	13
DIAGRAMA DE CIRCUITOS	13

	PRECAUCIÓN RIESGO DE CHOQUE ELÉCTRICO , NO ABRA	
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
	<p>Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.</p>	
	<p>Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.</p>	


LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

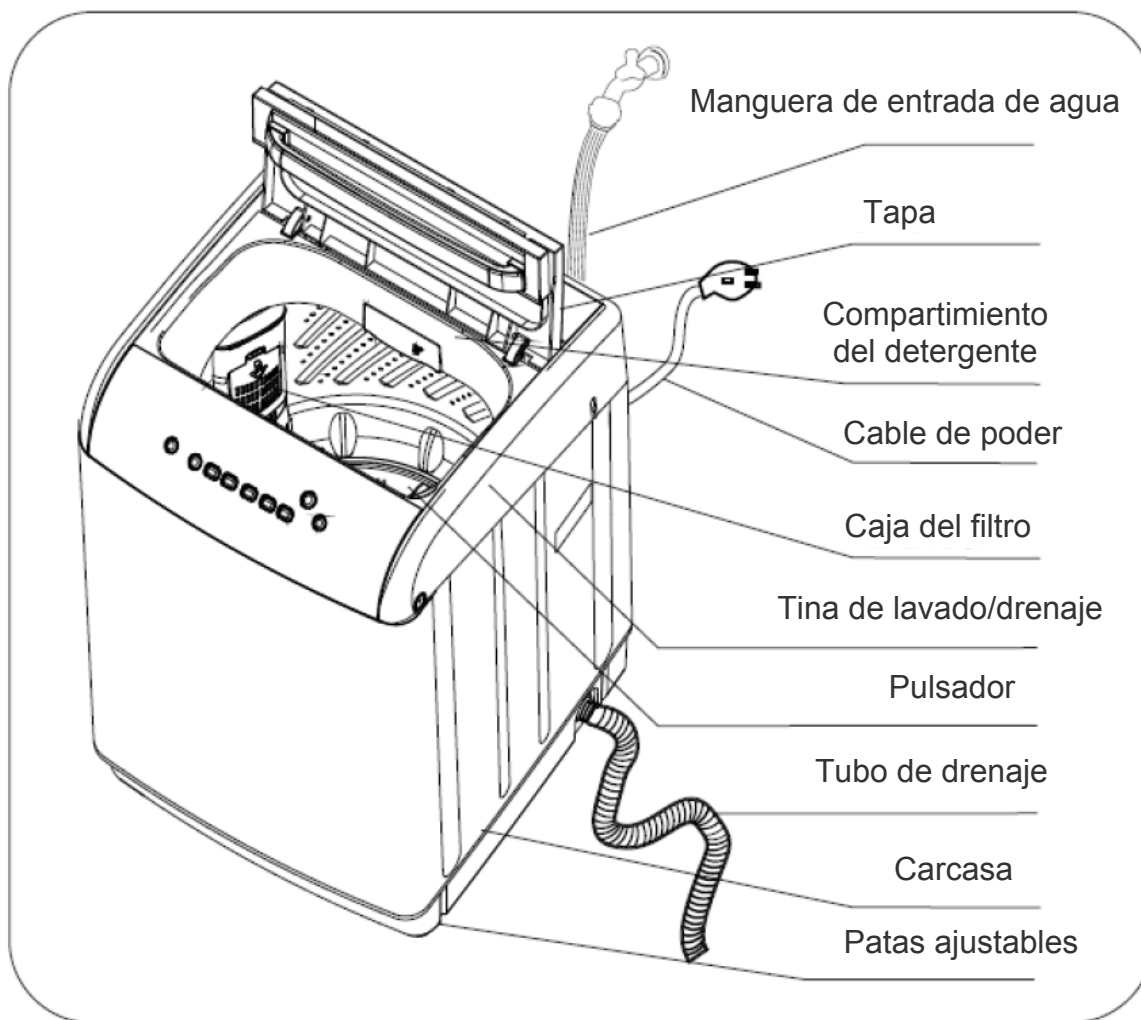

ESPECIFICACIONES

	LAV-5330A
Voltaje	AC220V
Frecuencia	50Hz
Fusible	250V 10A
Capacidad de lavado	8Kg
Presión del agua	0.03 – 0.8MPa
Peso neto	32.5Kg
Dimensiones del empaque	620x640x960MM
Grado de eficiencia	2
Consumo de energía (Kw/ciclo)	0.13
Consumo de agua (L/ciclo)	188
Tasa de agua	0.81

! INSTRUCCIONES DE SEGURIDAD

- Por favor lea atentamente estas instrucciones para prolongar la vida útil de su lavadora.
- No exponga la lavadora a los rayos directos del sol o a la lluvia.
- No coloque la lavadora en lugares húmedos.
- Evite salpicar agua sobre el interruptor.
- Utilice un tomacorriente independiente para el enchufe de la lavadora.
- El enchufe de la lavadora debe estar conectado adecuadamente al polo a tierra.
- No manipule el enchufe con las manos mojadas.
- Mantenga la unidad fuera del alcance de los niños.
- La lavadora debe estar lejos de fuentes de calor.
- No limpie la lavadora con productos volátiles, gasolina, etc.
- No coloque agua con una temperatura superior a 55°C en la lavadora.
- No levante la tapa mientras la lavadora está funcionando.
- No toque las prendas mientras la lavadora está funcionando.
- No deje agua en la lavadora para evitar que se congele.
- Permita que salga toda el agua por la manguera de drenaje antes de lavar nuevamente.
- Si observa algún daño en el cable de poder no utilice la lavadora.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.


INSTALACIÓN

INSTALACIÓN DE LA MANGUERA DE DRENAJE

1. Conecte la manguera de drenaje en el orificio que se encuentra al lado en la parte inferior de la lavadora.
2. Empuje la manguera de drenaje hacia la lavadora y ajústela con el anillo elástico.




- La colección de la manguera de drenaje debe ser apropiada con el fin de evitar que el agua se derrame.
- Cuando la lavadora esté funcionando, asegúrese de que la manguera de drenaje esté fija y no esté torcida.
- La altura de la manguera de drenaje debe ser menor a 6 cm o el agua no saldrá bien.

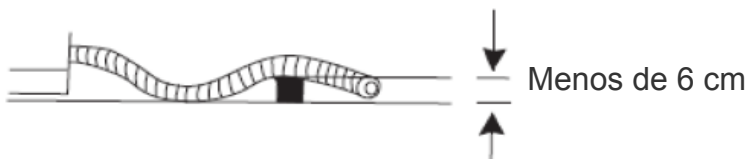


REEMPLAZAR LA MANGUERA INTERNA DE DRENAJE


1. Retire los tornillos y quite la tapa posterior. Suelte los tornillos entre la manguera de drenaje y la base. Saque la tapa de la manguera de drenaje en la dirección opuesta.

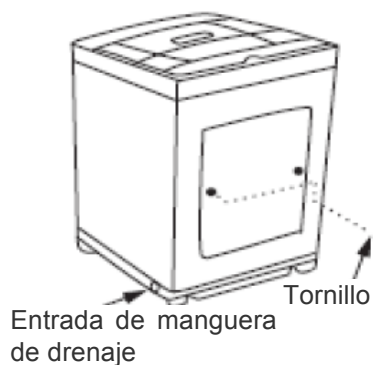


2. Mueva la manguera de drenaje interna en la dirección opuesta y con cuidado.

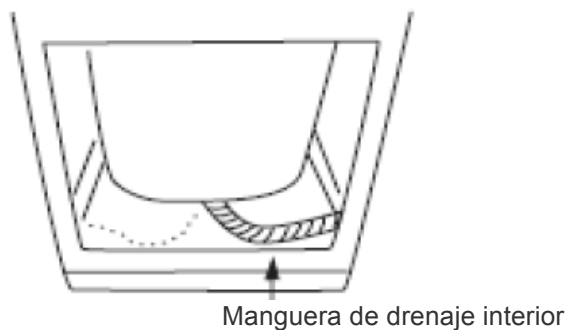

3. Instale la nueva manguera de drenaje de tal forma que quede bien apretada.

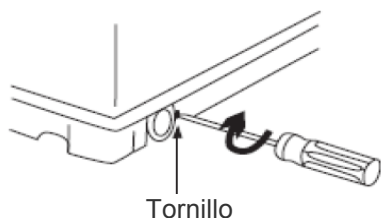

4. Cierre la tapa posterior y apriete los tornillos. Coloque la tapa de la manguera.

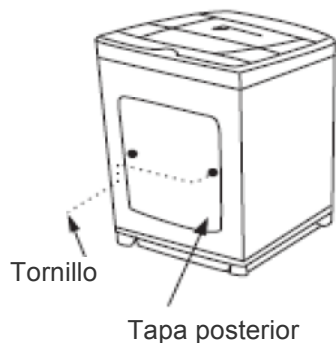


MANGUERA DE ENTRADA DE AGUA

1

Verifique que haya una arandela negra en la entrada de agua. Si no hay una, el agua saldrá por ahí.


Unión

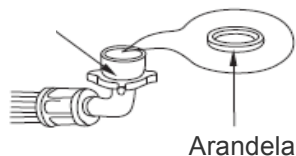

Arandela

2


Coloque la manguera de entrada de agua sobre la válvula verticalmente.

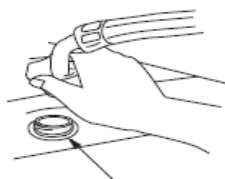

Válvula de entrada de agua

3


Apriete la unión de la base en el sentido de las manecillas del reloj para asegurar la conexión.

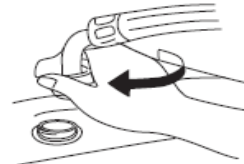

1

Separe la unión y la manguera de entrada de agua

Unión

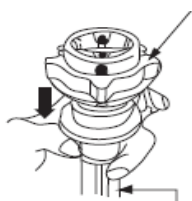


Manguera de entrada de agua

2

Suelte los 4 tornillos de la unión para asegurar que hay 3 círculos distantes entre la unión superior e inferior.

Anillo

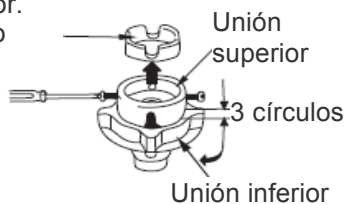

Unión inferior

Si la llave del agua es muy grande, retire el anillo

3

Ajuste los 4 tornillos simétricamente y haga que 2 tornillos cerca de la pared toquen primero la llave del agua.

Pared

Pequeño

Llave del agua

Grande

Ajuste los 2 tornillos cerca de la pared.


4

Presione la unión hacia arriba con el fin de que la arandela toque la llave del agua completamente (no retire la arandela)



5


Apriete los 2 tornillos al lado opuesto de la pared

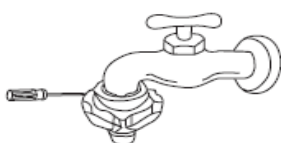

6


Mueva la unión hacia arriba y hacia abajo para que quede fija. La distancia debe ser menor a 3 mm.

Menos de 3 mm

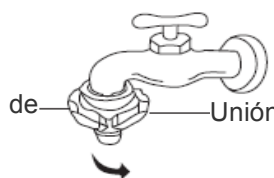


Unión

7 Presione el anillo hacia abajo.

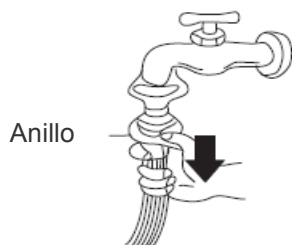

8 Inserte la manguera de entrada de agua en la unión y presiónela hacia arriba; luego libere el anillo

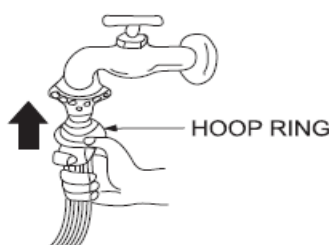

9 Verifique que la unión y la manguera de entrada de agua estén bien conectadas.


- Apriete la unión y la válvula de entrada, y luego abra la llave del agua para ver si hay fugas.
- Si hay fugas, cierre la llave y repita la instalación.
- Después de un tiempo de uso, es probable que la unión se afloje un poco. Repita la operación

PREPARACIÓN ANTES DE LAVAR

- Verifique si la prenda se puede lavar en la lavadora.



- Asegúrese de retirar todos los objetos de las prendas.

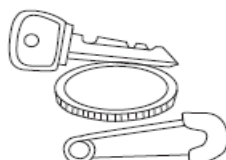

- Lave las prendas de color por separado.




- Retire el polvo de las prendas antes de lavarlas.



- Lave las prendas peludas por el lado contrario



- Lave las prendas delicadas envolviéndolas en una malla de nylon.

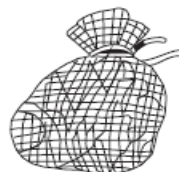

Preparación



- Conecte el cable de poder.
- Abra la llave del agua
- Coloque hacia fuera la manguera de drenaje

DESCRIPCIÓN DEL PANEL DE FUNCIONES



Nivel de agua
seleccionado

Programa
seleccionado

Tipo de lavado
seleccionado

Encender/Apagar
Se apaga
automáticamente al
terminar. También se
apaga después de 10
minutos sin que haya
actividad



Botón de nivel de
agua

Botón de
programación

Botón de tipo
de lavado

Comenzar /
Pausar

INSTRUCCIONES PARA LOS MODELOS DE AGUA CALIENTE Y AGUA FRÍA

- Utilice el botón de función favorita para seleccionar las funciones de agua caliente y agua fría.
- Al escoger la función de agua caliente de manera individual, coloque las prendas después de que el agua haya alcanzado el nivel, para evitar que las prendas se dañen debido a la alta temperatura.
- Un nivel seguro para el agua el nivel Bajo. Cuando el agua entre, esta debe entrar en el nivel bajo sin importar si es caliente o fría. La temperatura del agua caliente debe estar por debajo de 55 °C.

PANEL DE CONTROL

ENCENDER

Presione este botón para encender la lavadora. Presione de nuevo para apagarla. La lavadora se apagará automáticamente después de 10 minutos de no actividad.

PROGRAMA

Presione este botón para elegir una de las funciones de programación según la forma en que desee lavar. Presione el botón Play para comenzar y de nuevo para pausar.

PANEL DE CONTROL COMPUTARIZADO

Luz indicadora: esta se enciende cuando un programa se selecciona. Se podrá ver que el programa está activo cuando la luz titila. Si se presenta una señal de error en cuanto al agua, el drenaje o el movimiento de la lavadora, se indicará en la pantalla.

PROGRAMA DE LIMPIEZA

Utilice esta función de programación para que la lavadora se esterilice y se limpie automáticamente (lleve a cabo esta función cada 6 meses).

SECADO AL AIRE

Con esta función las prendas se secan alta velocidad a medida que la lavadora gira en el interior. También sirve para secar el interior en cuanto a contenidos restantes.

INICIAR/PAUSA

Presione este botón para iniciar y pausar la operación.

BOTÓN DE TIPO DE LAVADO

Presione el botón para seleccionar una de estas funciones:

		Luz Indicadora				Observaciones
Función	Acción	Remojar (soak)	Lavar (wash)	Enjuagar (rinse)	Girar (spin)	Ajuste automático
Estado inicial	Encender		X	X	X	
Proceso completo	Presionar una vez	X	X	X	X	
Sólo lavar	Presionar dos veces		X			
Lavar-	Presionar		X	X		

enjuagar	tres veces					
Enjuagar- Girar	Presionar cuatro veces			X	X	
Sólo girar	Presionar cinco veces				X	
	Presionar seis veces		X	X	X	Reajustar

Modelo LAV-5330A

Presione el botón de programación para cambiar en la siguiente secuencia:
Normal, Mantas, Rápido, Suave (Normal, Blanket, Speedy, Gentle)

INSTRUCCIONES DE OPERACIÓN

1. Verifique la conexión de las mangueras de entrada de agua y de drenaje, al igual que la conexión eléctrica. Retire los objetos de las prendas y sacuda el polvo de las prendas.

2. Agregue detergente. Se recomienda utilizar detergente bajo en espuma. Utilice agua tibia primero para que el detergente se derrita. Use la siguiente tabla como guía.

LAV-5330A	
Cantidad de ropa	Cantidad de detergente
> 6Kg	90g
4 – 6Kg	80g
2 – 4 Kg	70g
< 2Kg	60g

3. Cierre la tapa y encienda la lavadora.

4. Confirme el nivel de agua. Recuerde mantener bajo el nivel del agua cuando haya poca ropa, con el fin de evitar desperdicio de detergente y salpicaduras. Use la siguiente tabla como guía.

	LAV-5330A	
Nivel de agua	Cantidad de ropa	Cantidad de agua
Alto	> 6Kg	60L
Medio	4 – 6Kg	52L
Bajo	2 – 4 Kg	44L
Extra bajo	< 2Kg	36L

5. Elija el nivel de agua con el botón correspondiente. Las opciones son:
Medio, Alto, Bajo, Extra Bajo (Middle, High, Low, Extra)

6. Presione el botón de ajuste y elija la cantidad de tiempo (1 a 24 horas). Presione el botón Play para

iniciar. La luz indicadora parpadeará. Recuerde ajustar el tipo de lavado antes del tiempo, pues en ese punto, los botones anteriores no estarán disponibles para hacer ajustes.

7. Presione el botón Play para comenzar.


LIMPIEZA Y MANTENIMIENTO





LIMPIEZA DEL FILTRO

<p>1 Presione la pestaña en la parte superior de la caja del filtro y luego retírelo.</p> 	<p>2 Lave el filtro.</p> 	<p>3 Inserte de nuevo el filtro.</p> 
--	---	---

LIMPIEZA DE LA MANGUERA DE ENTRADA DE AGUA Y LA MALLA DEL FILTRO

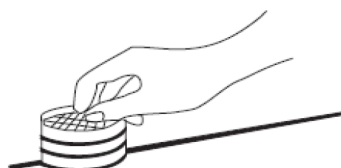Retire la manguera de entrada de agua y limpie el filtro de entrada con un cepillo.

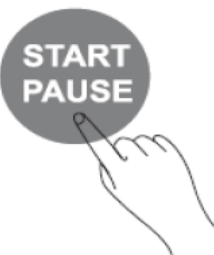

<p>1 Cierre la llave.</p> 	<p>2 Encienda la lavadora</p>  <p>Botón de encendido</p>	<p>3 Presione "comenzar"</p> 	<p>4 Suelte y retire la unión de la manguera de entrada de agua, y luego apague la lavadora.</p> 
--	--	--	---

LIMPIEZA DE LA LAVADORA

- Utilice una prenda suave para limpiar la lavadora con frecuencia. Cuando esté muy sucia, utilice una prenda suave y jabonosa para limpiarla.
- No agregue agua directamente a la lavadora ni utilice thinner ni productos abrasivos.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
No entra agua al enjuagarse	La lavadora comienza por agitarse y luego entra el agua.
El nivel de agua es mayor que el necesario	El nivel de agua estará un poco alto si las prendas están húmedas o si hay agua en la tina.
El nivel de agua es menor que el necesario	El nivel de agua puede ser un poco menos si las prendas son de fibra química o una mezcla de fibras.
Enjuaga al agitarse	La lavadora hará este proceso para unir las prendas.
Los botones no funcionan	Los botones solo están activos en el proceso de lavado una vez se comienza. Presione el botón de apagar para reajustar.

Tipo de falla	Especificación	Indicador digital	Sonido	Solución
Entrada de agua anormal	Entrada de agua por más de 25 minutos	Luz de entrada	10 segundos de sonido de alarma cada 10 minutos, medio segundo encendido y medio segundo apagado. Se apaga después de 1 hora.	Abrir y cerrar la tapa una vez
Drenaje anormal	Drenaje por más de 7 minutos	Luz de drenaje		
Giro anormal	Desbalance al girar	Parpadeo de luz de programa		
Abertura anormal de la tapa	No se ha tapado bien	Parpadeo de luz de proceso		
Nivel alto de agua Nivel bajo de agua	Sensor de nivel de agua suelto	Parpadeo de luz de nivel de agua		Asegúrese de la conexión

Límite de nivel alto de agua	Falla en la válvula de entrada	Parpadeo de todas las luces		Automáticamente
------------------------------	--------------------------------	-----------------------------	--	-----------------


Fenómeno	Razón	Indicador	Solución
La lavadora no funciona	El cable no está bien conectado.	Ninguno	Conecte el cable de poder con firmeza.
	No hay electricidad.	Ninguno	Haga que un electricista verifique esto.
	Una falla eléctrica hace que el programa termine. Cuando se reestablezca la energía eléctrica, debe volver a comenzar.	Cuando hay energía eléctrica, los botones de lavado, enjuague, suave y normal se iluminan.	Si hay energía, no se requiere reiniciar.
Poca entrada de agua	Hay un corte de agua o baja presión	E0	Abra bien la llave del agua y permita que regrese la presión normal.
Poco drenaje	El tubo de drenaje puede estar bloqueado.	E1	Verifique el tubo y reinicie la operación.
La tina toca la carcasa durante la operación	Las prendas no están bien colocadas en la tina.	E2	Abra la tapa y coloque bien las prendas.
No gira	Después de drenar, no se ha cerrado la tapa o cuando gira se abre la tapa.	E3	Cierre la tapa
El sensor de nivel está roto	El sensor del nivel de agua se ha roto y tiene poca conexión	E4	Se debe reparar
Se apaga automáticamente	Falla eléctrica	E5	Apagar o reparar

Por encima del nivel máxima de agua	La válvula de entrada de agua está rota	E6	Manejo automático
Bloqueo de niños	Cuando se abra la tapa la lavadora lo indicará	E7	Manejo automático

CONTENIDO

- 1 Lavadora automática
- 1 Manguera de entrada de agua
- 1 Manguera de drenaje de agua
- 1 Anillo de sujeción para la manguera
- 1 Tablero inferior
- 1 Perno
- 1 Manual de instrucciones


DIAGRAMA DE CIRCUITOS

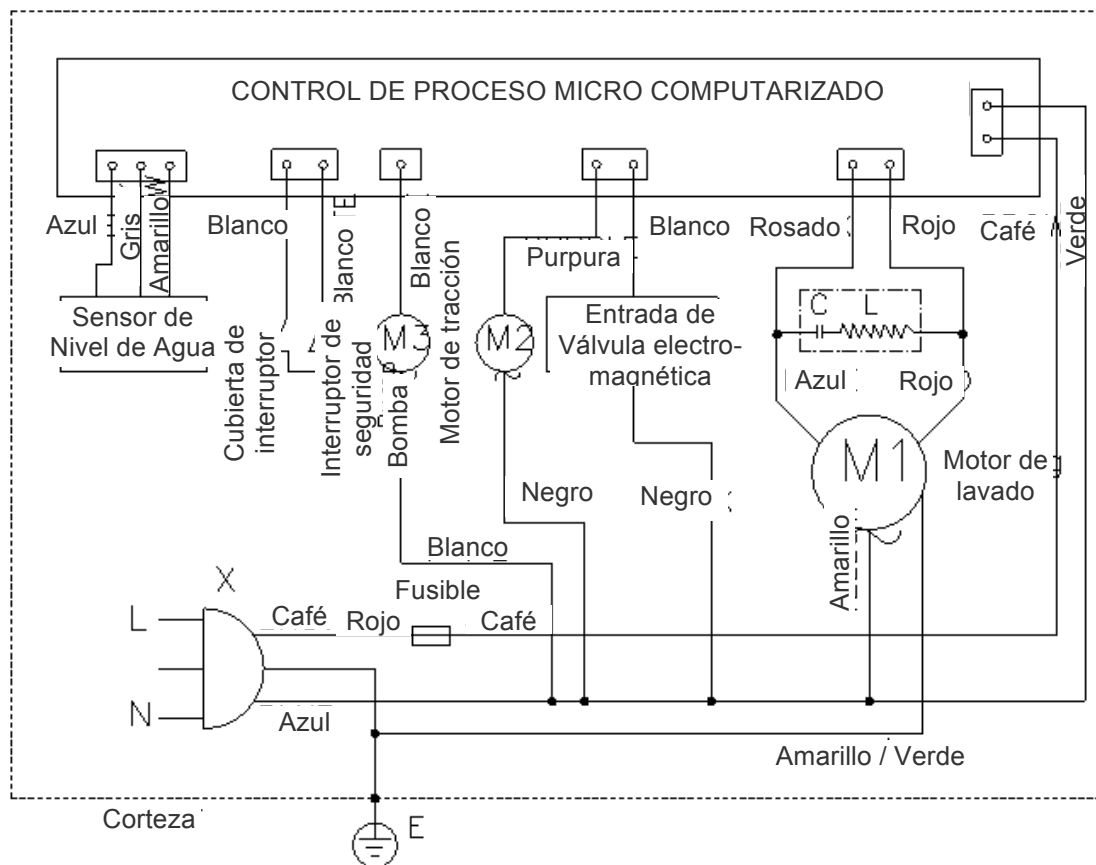



**INSTRUCTION MANUAL
AUTOMATIC WASHING MACHINE**

LAV-5330A

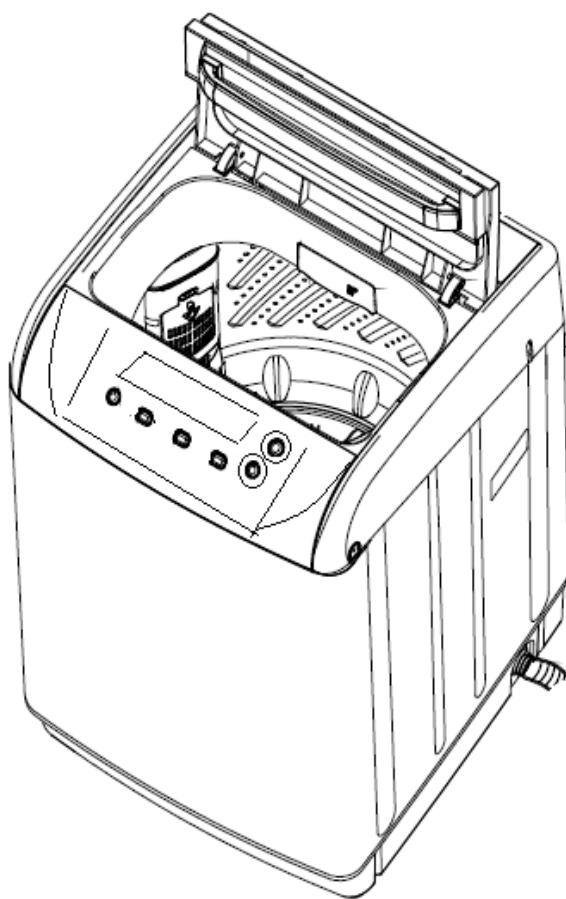





DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com

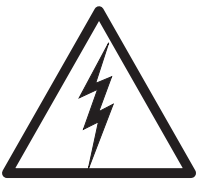

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	


PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

NAME OF PARTS

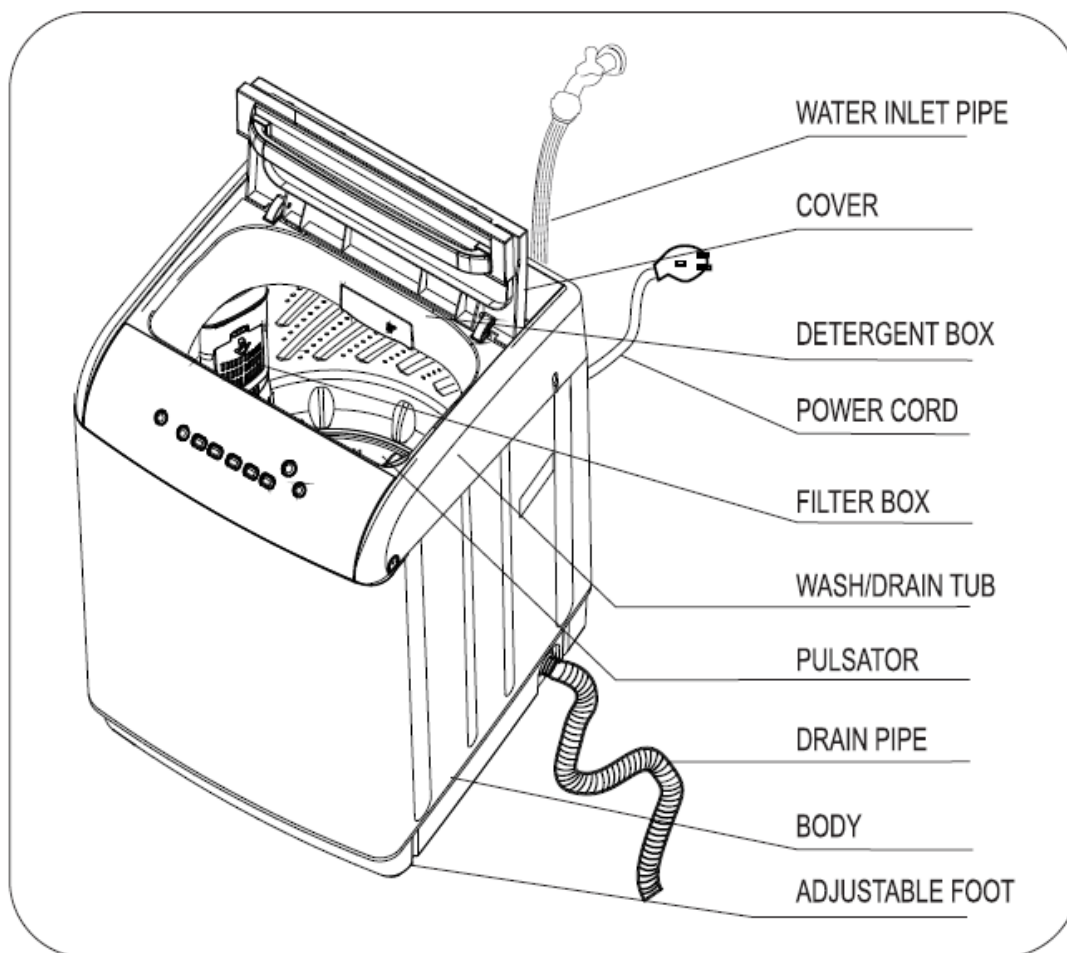

MAIN TECHNICAL PARAMETER

MODEL	LAV-5330A
RATED VOLATAGE	AC220V
RATED FREQUENCY	50Hz
FUSE	250V 10A
RATED WASH/DRAIN CAPACITY	8.0Kg
WATER PRESSURE	0.03-0.8MPa
NET WEIGHT	32.5Kg
PACKING SIZE	620X640X960MM
ENERGY EFFICIENCY GRADE	2
POWER CONSUMPTION(KW/CYCLE)	0.13
WATER CONSUMPTION(L/CYCLE)	188
WASH RATIO	0.81

NOTICE:

☐ PLS READ THE NOTICE CAREFULLY IN ORDER TO PREVENT FROM HURTING AND EXTEND THE LIFE OF USING.

⊘ DENOTING IT SHOULD BE PROHIBITED ! DENOTING IT SHOULD BE PAID ATTENTION

- DO NOT EXPOSE THE WASHING MACHINE TO A DIRECT SUNLIGHT OR RAIN.



- DO NOT PUT THE WASHING MACHINE AT A DAMP PLACE.



- DO NOT SPRINKLE WATER OVER SWITCH.



- PLS USE A SEPARATE ELECTRICAL OUTLET WITH RIGHT VOLTAGE.
- THE SOCKET OF POWER SHOULD BE GROUNDED PROPERLY.



- PLS DO NOT HAUL THE CORD WHILE CUT OFF ELECTRICAL POWER
- PLS DO NOT INSERT AND PULL OUT OF THE PLUG WITH WET HANDS.



- KEEP CHILDREN AWAY FROM THE WASHING MACHINE.



- KEEP THE WASHING MACHINE AWAY FROM FIRE OR HEAT SOURCE.



- DO NOT WIPE THE WASHER WITH THE VOLATILE MATERIAL, GASOLINE ETC.



- DO NOT POUR OVER 55°C WATER INTO THE TUB.



- DO NOT OPEN THE COVER WHILE WASHING.



- DO NOT TOUCH THE CLOTHES IN THE TUB WHEN THE TUB DOES NOT STOP WORKING.



- DO NOT LEAVE WATER IN THE WASHING MACHINE TO PREVENT FROM FREEZING.




- ONLY USE THE ALTERNATING WHICH LABEL SPECIFIED.
- MUST LET THE DRAIN HOSE DOWN BEFORE WASHING CLOTHES.
- HOT WATER DO NOT OVER 55°C.
- THE POWER SUPPLY CORD SHOULD USE "Y" TYPE CONNECTION. IF IT HAS SOME DAMAGES, YOU SHOULD LET PROFESSIONAL PERSON REPLACE IT. IT IS FORBIDDEN TO REPLACE OR DISASSEMBLE IT EXCEPT THE PROFESSION MAINTENANCE PERSON.

INSTALLATION

PLACE THE WASHING MACHINE ON THE FLAT AND SOLID GROUND


- PLEASE DO NOT PUT THE PACKAGE BASE(PLASTIC SUPPORT) UNDER THE WASHING MACHINE, OR IT WILL PRODUCE NOISE AND DAMAGE THE WASHING MACHINE.
- PLACE THE WASHING MACHINE ON THE FLAT AND SOLID GROUND.
- PLEASE KEEP THE DISTANCE OF MORE THAN 15CM FROM THE WALL, SO THAT IT CAN EMIT HEAT EASILY AND REDUCE NOISY.

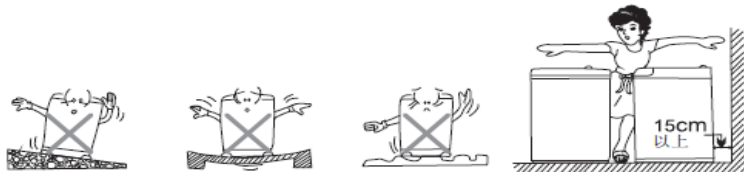

HORIZONTAL ADJUSTMENT

SHAKE THE WASHING MACHINE, MAKE SURE IT IS FAST.

- LOOSEN THE LOCKNUT AND TURN THE ADJUSTOR TO AVOID SHAKING.
- IF THERE IS NO SHAKING, PLEASE TURN THE LOCKNUT INTO TIGHT

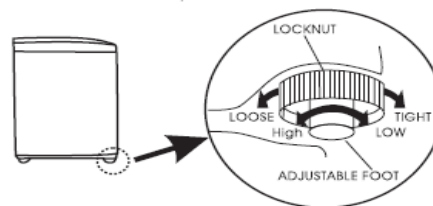


- CONFIRMING HORIZONTAL LEVEL AS THE PICTURE SHOWING.



RAT-ANTI BOTTOM BOARD INSTALLATION

- AFTER INSTALLING THE WASHING MACHINE, TAKE OUT THE RAT-ANTI BOTTOM BOARD. TURN UPWARDS THE BOARD SHOWING "UP" AND INSERT IT FROM THE BACK SIDE OF WASHING MACHINE, UNTIL YOU HEAR "KATA". (IF THE RAT-ANTI BOTTOM BOARD DOES NOT INSERT COMPLETELY, IT WILL PRODUCE NOISE WHEN SPINNING.
- INSTALL THE FIXED SCREW IN THE SCREW INTAKE.

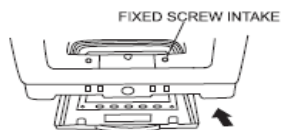


OUTER DRAIN PIPE INSTALLATION

- PUSH THE OUTER DRAIN PIPE INTO THE WASHING MACHINE, AND THEN FIX IT BY SPRING RING.




 - INSERT THE OUTER DRAIN PIPE MUST BE PROPER, OR THE WATER WILL LEAK OUT.
- WHEN THE WASHING MACHINE IS RUNNING, PLS LAY DOWN THE OUT DRAIN PIPE AND MAKE SURE IT DOES NOT ENLACE.
- THE HEIGHT OF DRAIN PIPE SHOULD BE LOWER THAN 6CM, OR THE WASHING MACHINE WILL NOT SPIN ORDINARY.



THE METHOD OF REPLACE THE INNER DRAIN PIPE


- 1 LOOSEN SCREWS AND TAKE OUT THE BACK COVER. LOOSEN THE FIXED SCREW BETWEEN DRAIN PIPE AND BASE. TAKE OUT THE CAP OF DRAIN HOSE ON OPPOSITE PLACE.

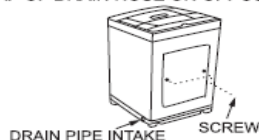


- 2 MOVE INNER DRAIN PIPE TO OPPOSITE PLACE CAREFULLY, DO NOT DAMAGE IT.



- 3 INSTALL INNER DRAIN PIPE PROPERLY, MUST TIGHTEN THE FIXED SCREW.

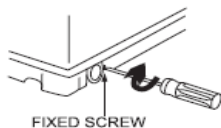


- 4 CLOSE THE BACK COVER AND TIGHTEN SCREW. PUT THE CAP OF DRAIN INTAKE TO THE OPPOSITE PLACE.

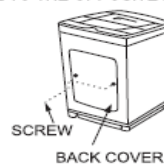


INSTALLATION

OUTER DRAIN PIPE INSTALLATION


- INSERT THE OUTER DRAIN PIPE INTO THE INTAKE ON SIDE OF WASHING MACHINE.

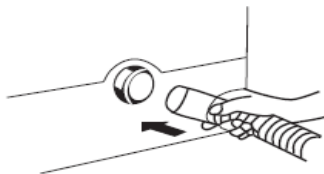

- PUSH THE OUTER DRAIN PIPE INTO THE WASHING MACHINE, AND THEN FIX IT BY SPRING RING.

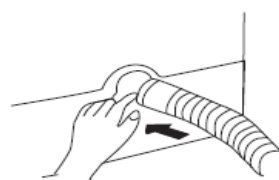

 
- INSERT THE OUTER DRAIN PIPE MUST BE PROPER, OR THE WATER WILL LEAK OUT .
- WHEN THE WASHING MACHINE IS RUNNING, PLS LAY DOWN THE OUT DRAIN PIPE AND MAKE SURE IT DOES NOT ENLACE.
- THE HEIGHT OF DRAIN PIPE SHOULD BE LOWER THAN 6CM, OR THE WASHING MACHINE WILL NOT SPIN ORDINARY.



THE METHOD OF REPLACE THE INNER DRAIN PIPE

1

LOOSEN SCREWS AND TAKE OUT THE BACK COVER.
LOOSEN THE FIXED SCREW BETWEEN DRAIN PIPE AND BASE.
TAKE OUT THE CAP OF DRAIN HOSE ON OPPOSITE PLACE.

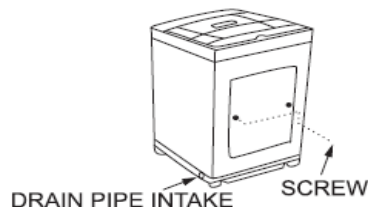


2

MOVE INNER DRAIN PIPE TO OPPOSITE PLACE CAREFULLY,
DO NOT DAMAGE IT.




3

INSTALL INNER DRAIN PIPE PROPERLY, MUST TIGHTEN
THE FIXED SCREW.

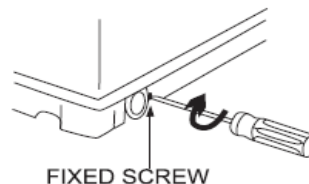

4

CLOSE THE BACK COVER AND TIGHTEN SCREW. PUT THE CAP
OF DRAIN INTAKE TO THE OPPOSITE PLACE.

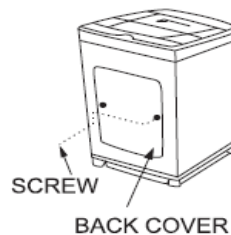

INSTALLATION

THE INSTALLATION OF WATER INLET PIPE

- CONNECT WITH THE WASHING MACHINE
PLEASE USE THE NEW WATER INLET PIPE PARTS ,NOT USE THE OLD ONE.




DENOTING IT SHOULD BE PROHIBITED



DENOTING IT SHOULD BE PAID ATTENTION


1

CHECK IF THERE IS A BLACK SEAL WASHER IN WATER INLET JOINT BASE .IF HAD NO ONE ,THE WATER WILL LEAK OUT.

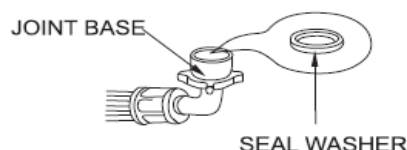


2

PUT THE WATER INLET PIPE ON INTAKE OF WATER INLET VALVE VERTICALLY.

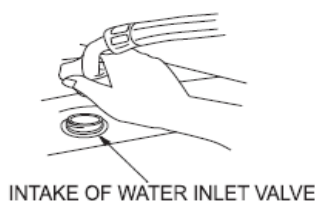


3

TIGHTEN THE JOINT BASE CLOCKWISE TO MAKE SURE CONNECTING THE JOINT BASE AND INTAKE OF WATER INLET VALVE TIGHTLY.

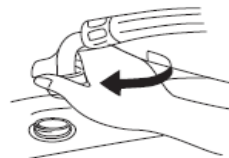


1

SEPARATE THE JOINT BASE AND WATER INLET PIPE.

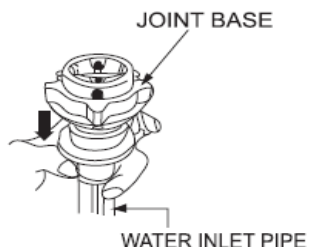

2


LOOSEN 4 FIXED SCREWS ON THE UP JOINT TO MAKE SURE THERE ARE 3 CIRCLES DISTANT BETWEEN UP AND DOWN JOINT.

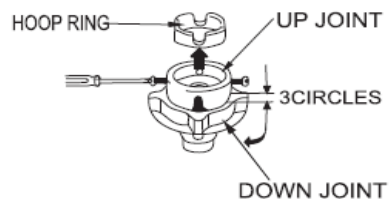

IF THE WATER FAUCET IS TOO BIG, PLS TAKE OUT THE HOOP RING.

3


ADJUST THE 4 SCREWS SYMMETRICALLY AND MAKE 2 SCREWS NEAR THE WALL TOUCH WATER FAUCETS FIRST.

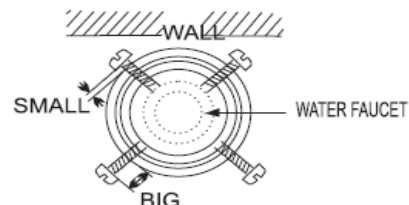

TIGHTEN 2 SCREWS NEAR THE WALL FIRST.


4

PUSH UPWARDS THE UP JOINT IN ORDER THE INNER SEAL WASHER CAN TOUCH WATER FAUCET COMPLETELY(PLS DO NOT TAKE OUT THE SEAL WASHER).

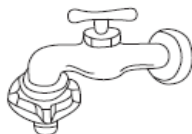


5

TIGHTEN ANOTHER 2 SCREWS OPPOSITE THE WALL WITH SCREW KNIFE.

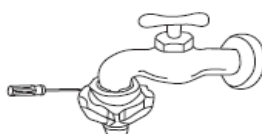

6

TURN DOWN JOINT TO TIGHTEN UP AND DOWN JOINT TOGETHER (IF DO NOT TIGHTEN ,THE WATER WILL LEAK OUT),MAKE IT LESS THAN 3MM DISTANT.

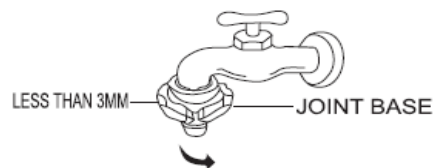


INSTALLATION

INSTALL WATER INLET PIPE

● CONNECT WITH THE WASHING MACHINE


7

PRESS THE HOOP RING DOWNWARDS.

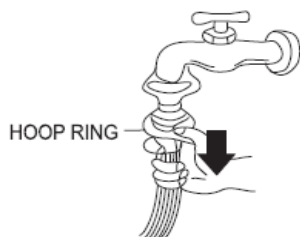

8

INSERT THE WATER INLET PIPE INTO THE JOINT AND PUSH IT UPWARDS. AND THEN RELEASE THE HOOP RING.

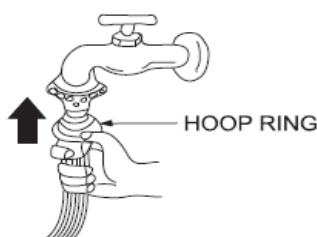

9

CHECK IF THE DOWN JOINT AND WATER INLET PIPE ARE CONNECTED TIGHTLY.

- TIGHTEN THE JOINT BASE AND WATER INLET VALVE, AND THEN TURN ON THE WATER FAUCET TO CHECK IF THE WATER IS LEAKING.
- IF IT LEAK WATER, PLS CLOSE WATER FAUCET AND INSTALL IT AGAIN.(IF UP JOINT BASE DO NOT INSTALL PROPERLY OR UP AND DOWN JOINT BASE DO NOT TIGHTEN, IT WILL HAPPEN THE WATER-LEAKING.)
- AFTER USAGE WITH LONG TIME. IT WILL BE LOOSE POSSIBLY. PLS INSTALL IT AGAIN FROM 1 TO 9.




PREPARATION BEFORE WASHING

- CHECK IF THE LAUNDRY CAN BE WASHED BY WATER.



- BE SURE TO REMOVE THINGS SUCH AS KEYS, PINS AND COINS FROM THE LAUNDRY.

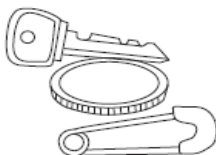

- WASH OILY OR DYED LAUNDRY SEPARATELY.



PREPARATION




- WIPE OUT DUST ON LAUNDRY BEFORE WASHING.



- WASH FUZZY LAUNDRY BY ITS INNER SIDE.



- WASH DELICATE CLOTHES, WRAPPING THEM IN A NYLON NET.

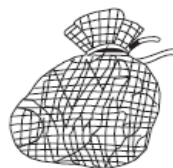


- INSERT THE POWER PLUG COMPLETELY.
- OPEN THE WATER FAUCET(IF THE WATER INLET PIPE WAS TAKEN OUT, PLS CONNECT IT FIRST.)
- LAY DOWN THE OUTER DRAIN PIPE.

CONTRON PANEL DESCRIPTION



FUNCTION INSTRUCTION OF THE CONTROL PANEL

Model: I

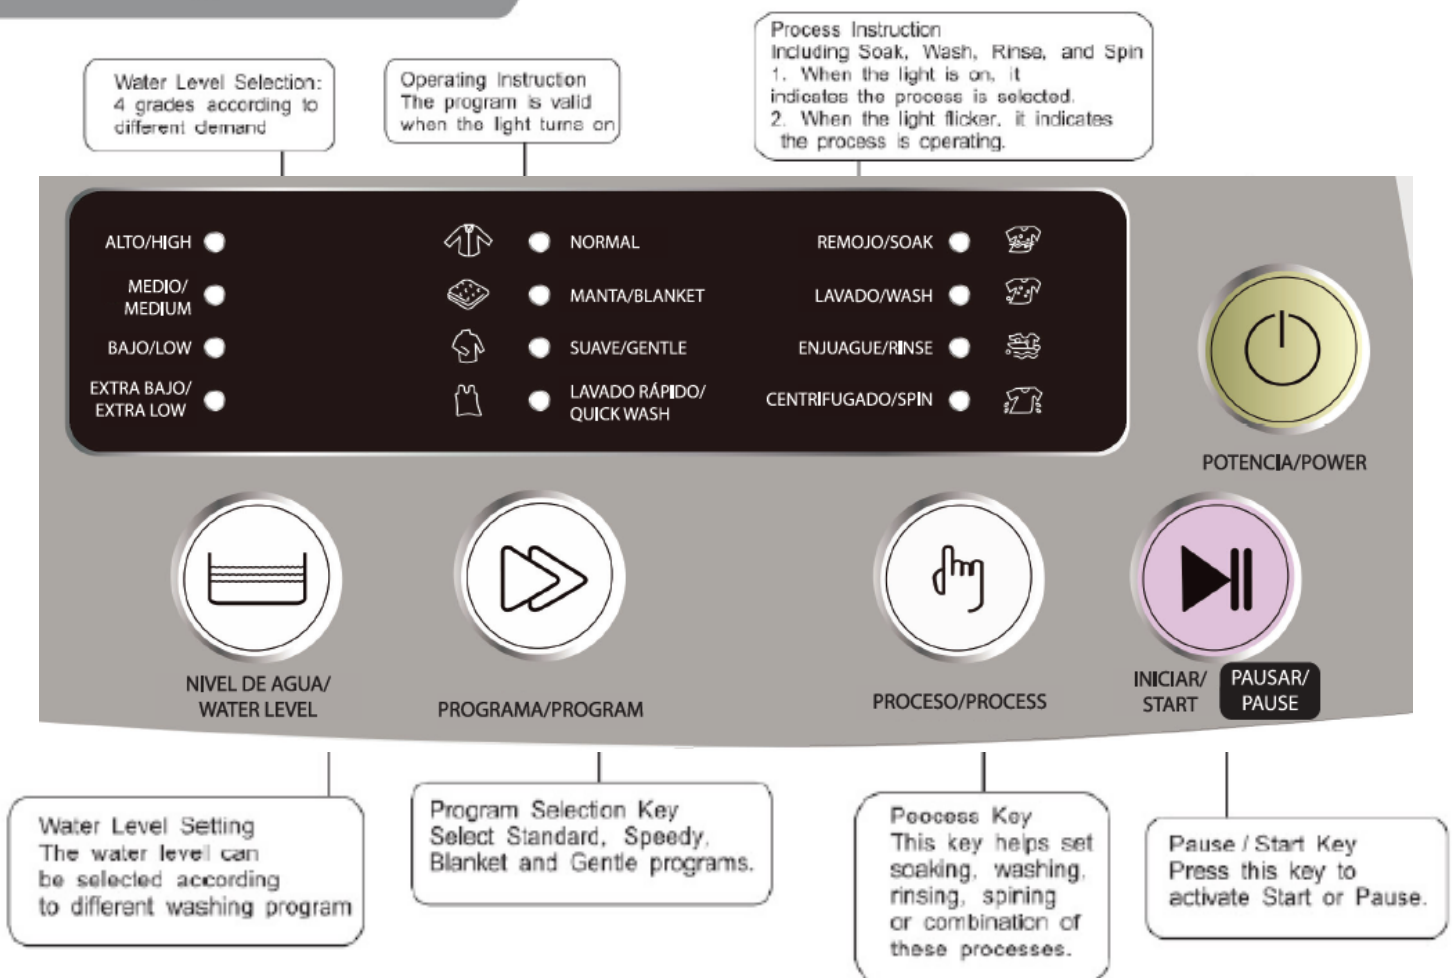

Instructions on Cold and Hot Water Models:

Key Switching Mode:

Pressing the Favorite Key can switch cold and hot water functions:
cold water inlet--cold water inlet+hot water inlet--hot water inlet,
followed by recycling.

Attention:

1. When choosing the hot water function individually, please put in the clothing after the water filling the water level set. Or it may damage the clothing as high temperature.
2. The safety water level is "LOW". When filling in water, the cold water should be first poured in to the Low water level whatever it is cold or hot water function. The temperature of the hot water should be below 55 °C.

FUNCTION INSTRUCTION OF THE CONTROL PANEL

Power Switch

Press the power switch and the power is connected; press again and it is cut off. The power will be automatically off after 10 mins without operating.

Program Switch When Operating

- Whenever to change the Program Selector, press Start/Pause key, then to change it after the light becomes flickering, press Start/Pause key to continue.
- Press Start/Pause key to pause when operating, press again to continue.

Computer Control Panel

- Indicator Light:
The relevant light turns on when a program is set.
The program is being operated when the light flickers.
Abnormal Signal:
- If a error signal occurs, there is something wrong with watering, draining or spinning.

HOW TO EFFECT TUB-CLEANING PROGRAM

Instructions on Cleaning the Tubs

This program is set to clean and sterilize the inner and outer sides of tubs and pulsators (cleaning only, every six month).

AIRDRY (SELF-CLEAN) FUNCTION

Function of Air Drying (Tub)

Dry the clothing with air relying on the high speed of wash and spin tubs. Also it can dry the tub and restrain the mycete.

FUNCTION INSTRUCTION OF THE CONTROL PANEL

Computer Control Panel

- **Start/Pause Key:**
Press the key to start operating.
When operating, press the key to pause (the light still on), press again to continue.
- **Process Key:**
Press the key to choose washing process,
Every single press leads to a different process,
details as follows.

Model: I

Function	Action	Indicator Light				Remarks
		Soak	Wash	Rinse	Spin	
Initial State	Power Key "ON"		○	○	○	Auto Set
Whole process	Press one time	○	○	○	○	
Wash Only	Press two times		○			
Wash-Rinse	Press three times		○	○		
Rinse-Spin	Press four times			○	○	
Spin Only	Press five times				○	
	Press six times		○	○	○	Reset

Model: II

(Normal+wash, rinse, spin-Normal+soak, wash, rinse, spin-Blanket+soak, wash, rinse, spin-Blanket +wash, rinse, spin-Gentle+wash, rinse, spin-Speedy +wash, rinse, spin-wash-wash+rinse-rinse+spin-spin)

- **Program Selection Key:**

Press the key and the program will change in sequence, so does the light.



- The machine is turned off when first connected to power without pressing any keys.
Press the Power key and it will show Normal process which is stand by.

USAGE METHOD

Method of Standard Process

1 Checking

- Drain pipe connection
Status of power cord,
and faucet.
Take out sundries in
pocket.
Shake off the dust.



2 Put in clothing, detergent

- Normal low foaming detergent dosage

LAV-5330A	
Amount of clothing	Amount of detergent
>6.0kg	90 g
4.0-6.0kg	80 g
2.0-4.0kg	70 g
<2.0kg	60 g

- Recommended to use low foaming detergent, use warm water to melt it first.
- Amount of concentrated detergent please refer to Instruction of detergent.

3 Close the cover and press the Power key.




4 Confirm the water level Water level and clothing amount comparison

LAV-5330A		
Water level	Clothing amount	Water amount
High	>6.0kg	≈ 60L
Middle	4.0-6.0kg	≈ 52L
Low	2.0-4.0kg	≈ 44L
Extra low	<2.0kg	≈ 36L

- Attention: Keep the water level low when there is less clothing, or it is a waste of detergent and will splash the water

 5 Press the Water Level key, the light shows as follows.



6 Preset

- Press the Preset key and choose the preset time (1-24hours); Press the Start/Pause key, the Preset indicator light will flicker.
- Attention: Set the washing process before operating Preset. When it starts, other keys are out of use. The washer will automatically finish the washing process when the preset process finishes.

7 Press the Start/Pause key to start the washer.

Press the Start/Pause key, and the washer will process the set program (standard, middle water level) automatically, and the power will be off after ten mins of buzzing


Start
Pause

MAINTENANCE AND CONSERVATION


WASH THE FILTER BOX

1


PLS PRESS THE BUCKLE AT THE TOP OF FITER BOX, THEN PULL IT OUT.

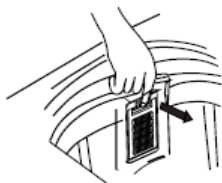
2

WASH THE FILTER BOX .

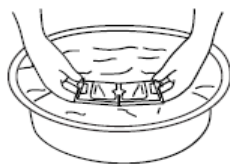

3

PLS PRESS THE BUCKLE AT THE TOP OF FITER, THEN INSERT AND TIGHTEN IT.

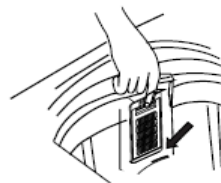

CLEAN THE WATER INLET PIPE AND FILTER NET

- TAKE OUT THE WATER INLET PIPE AND CLEAN THE WATER INLET FILTER BY BRUSHTERMINALLY.
- PLS FOLLOWING THE STEP ONE BY ONE , OTHERWISE THE WATER WOULD SPRAY OUT IF TAKE OUT THE WATER INLET PIPE DIRECTLY.

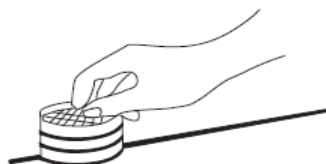
1

CLOSE THE TAP.


2

TURN ON THE POWER SWITCH.



POWER SWITCH

3

PRESS THE START /PAUSE SWITCH.

START
PAUSE


4

LOOSEN AND TAKE OUT THE JOINT OF WATER INLET PIPE, THEN TURN OFF THE POWER.



CLEAN THE WASHING MACHINE

- PLS USE SOFT CLOTH TO WIPE THE WASHING MACHINE FREQUENTLY. WHEN IT IS VERY DIRTY, USE SOFT CLOTH WITH SOAPY WATER TO CLEAN IT.
- DO NOT POUR WATER ON THE WASHING MACHINE DIRECTLY, OR DO NOT USE THINNER, SCOUR, COAL OIL, NAPHTHA AND ALCOHOL TO WIPE THE WASHING MACHINE.
- IF WANT TO USE CHEMICAL MEDICAMENT, PLS BE ACCORDING TO INSTRUCTION STRICTLY.



EXAMINE AND REPAIR THE FAULTS

Below Phenomena are not Faults

Phenomenon	Reason
No water inlet as start rinsing	<ul style="list-style-type: none"> To drain the water in clothing or detergent, it will start from spinning, then water inlet (Start from spinning if there is water in tub).
Water level higher than actual need	
Water level lower than actual need	<ul style="list-style-type: none"> The water level will be a bit higher if the clothing is wet or there is water in the tub.
Rinse when spinning	<ul style="list-style-type: none"> The water level may be a bit lower if the clothing is chemical fiber or mixture fabric.
Keys not working	<ul style="list-style-type: none"> It will start rinsing to uniform the gathered clothing.
	<ul style="list-style-type: none"> Keys only available on Washing process once started. Press Power key to reset it.

Before Asking for Service

Problem	Main Inspection Point
Stalling	<ul style="list-style-type: none"> Power failure or not? Faucet on or not? Power cord in position or not? Fuse working well? Press the Power key? The Start key?
No water inlet	<ul style="list-style-type: none"> Faucet on or not? Water pipe frozen? Water supply cut off? Filter net blocked?

Methods to Deal with Fault I

Fault Types	Specifications	Digital indicator	Buzzering	Solution
Abnormal water inflow	Inflowing time over 25 mins	Inflow light	10 seconds buzzing every 10 mins, 0.5 second ON, 0.5 second OFF, power off after 1 hour.	Open and close cover one time
Abnormal drain	Draining time over 7 mins	Drain light		
Abnormal spinning	Imbalance in spinning	Program light flicker		
Abnormal opening cover	Uncovered when starting spinning	Process light flicker		
"High Water Level Boundary"	Water level sensor loosening	Water level light flicker		Ensure connecting
"Low Water Level Boundary"				
High Water Level Alarming boundary	Fault in inlet valve	All lights flicker		Automatically

EXAMINE AND REPAIR THE FAULTS

METHODS TO DEAL WITH FAULTS II

- washing machine buzzer will warn and indicator lamp will flicker for some defect machine.

phenomenon	Reason	Indicator	Solution
Out of work completely	plug doesn't insert completely into the socket or doesn't press switch on/off	No display	Insert tightly into the power. Press the power switch
	Socket no power or fuse is broken	No display	An electrician to repair the socket or fuse
	A power failure causes program disappeared. When power on need to restart the operation.	When power on, Wash, Rinse, Gentle, Normal four button indications light up	When power on, need to restart the program
Water inlet shortage	Faucet off, water supply cuts off, water pressure not enough, that causes water doesn't reach level	E0	Turn on the faucet or just wait for water pressure recovering
Poor drainage	Drainage tube doesn't put down or be blocked. That causes water doesn't drain after 5 minutes	E1	Check the tube, solve the problem. Restart to operation
Touch the shell during spinning	Cloth are uneven in tub causes it's unbalance and rub the shell. Washing machine will adjust by itself. After twice adjustment, if it is still in unbalance, it will be warning.	E2	Open the cover, put the cloth even
No spin	After drain, forget to cover the lid. Or when spinning, it is opened the cover, it will stop spinning.	E3	Cover the lid
The water level sensor is broken	Water level sensor is broken or poor connect	E4	Repair
Automatic shutdown failure	No automatic power-off	E5	Turn off the power or repair
High water level limit	Inlet water valve is broken	E6	Automatic handle
Child lock	When open the lid, it will be warning.	E7	Automatic handle

Notes: Automatic adjustment is to stop spinning and change to reverse frequently cloth to make it even. Too much or too little cloth, or putting washing machine not in horizontal level, it will cause spinning in unbalance. It will be automatic adjustment and increases rinsing times.

PACKING LIST

- 1 AUTOMATIC WASHING MACHINE
- 1 WATER INLET PIPE
- 1 OUTER DRAIN PIPE
- 1 DRAIN PIPE FIXED RING
- 1 BOTTOM BOARD
- 1 BOLT
- 1 INSTRUCTION MANUAL

CIRCUIT DIAGRAM

